



General Scissor Sharpening Guidelines

80° Angle Sharp Tips

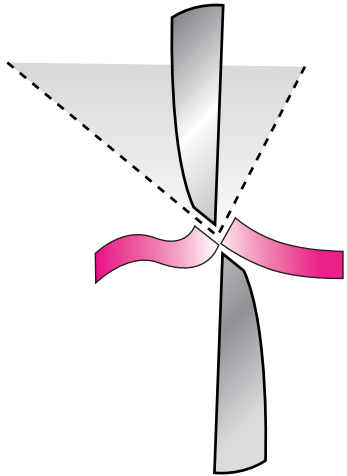


Rounded or Dull Tips

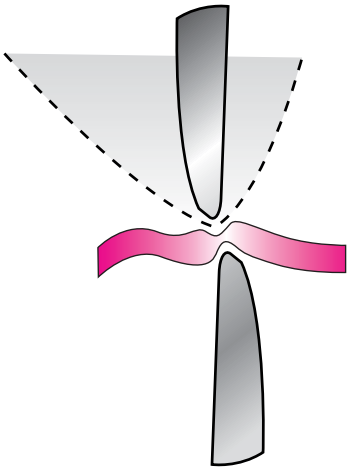

Dull




Remove

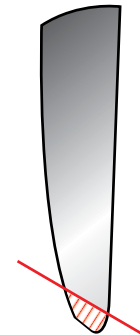

Sharp



Scissors will function properly when the two opposing blades meet together smoothly, with each Blade Edge angled 90° or less in relation to the Blade Face.

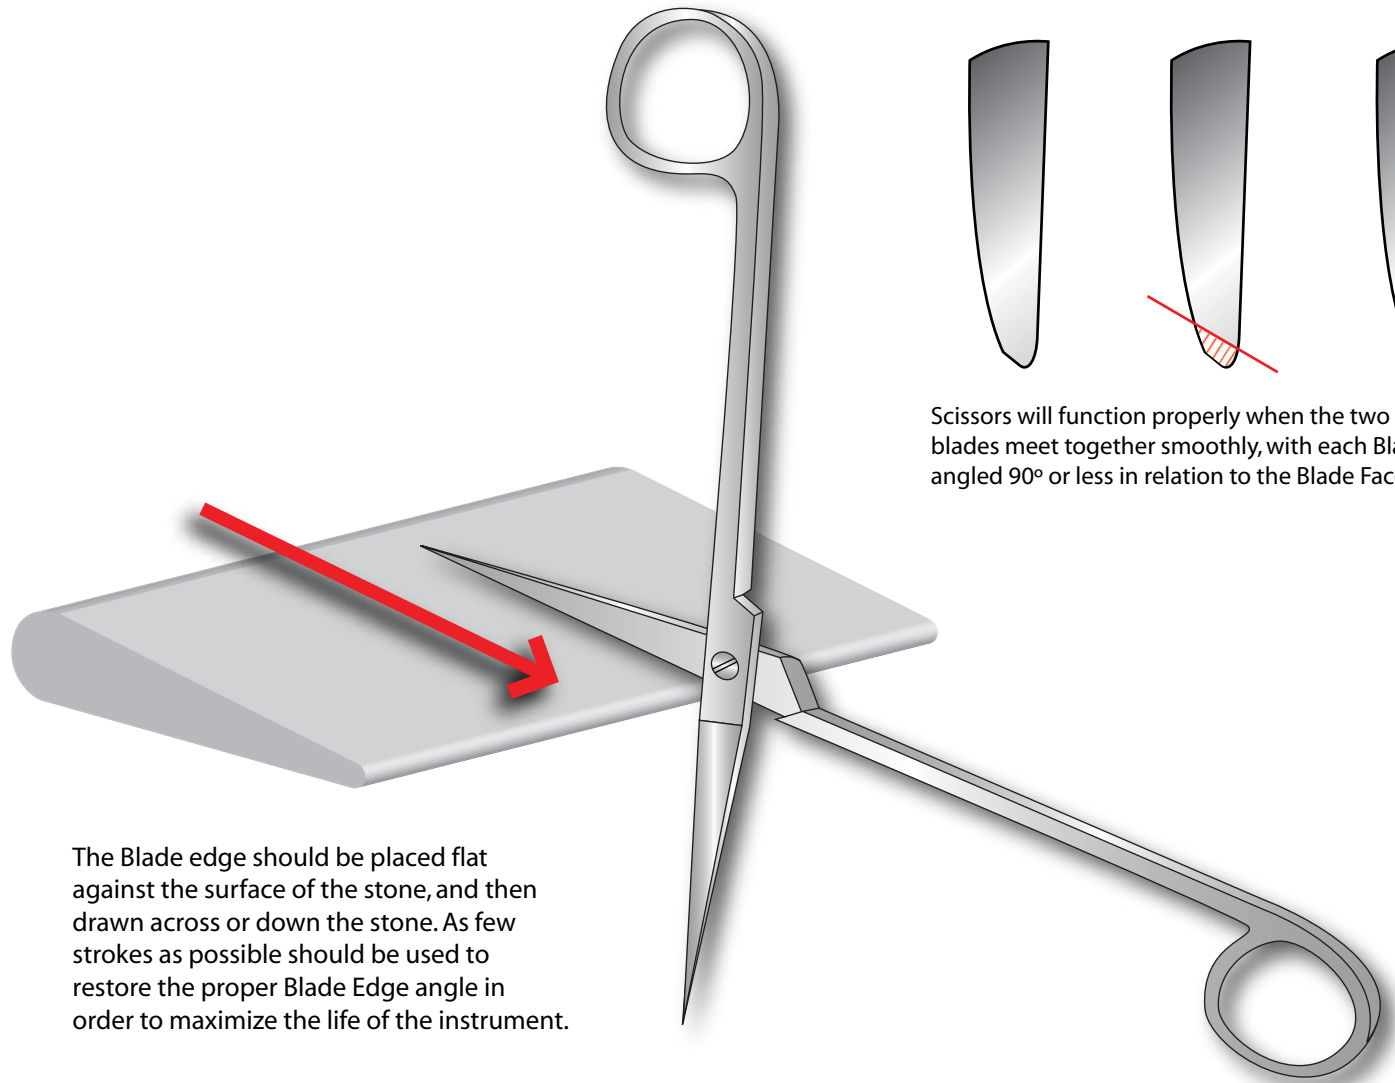


The Blade edge should be placed flat against the surface of the stone, and then drawn across or down the stone. As few strokes as possible should be used to restore the proper Blade Edge angle in order to maximize the life of the instrument.

Bottom of Blade

Back of Blade

Face of Blade

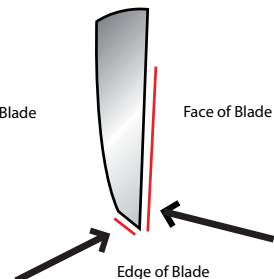

DO NOT Sharpen this surface

Sharpen this surface ONLY.

Karl Schumacher

...Instruments of the better grade.

108 Lakeside Drive
Southampton, PA 18966
1-800-523-2427